



Asus UL80J RAM Replacement

This guide will teach you how to replace your RAM card for an Asus UL80J-BBK5.

Written By: John



INTRODUCTION

RAM stands for Random Access Memory. How much RAM you have determines what kind of tasks you can do simultaneously. This often affects performance in a multitude of ways. This guide will show you how to replace your RAM cards.



TOOLS:

- [Phillips Screwdriver](#) (1)
-

Step 1 — RAM cards



- Unscrew the back plate in the middle of the laptop by removing the two 5 mm screws - this will expose the RAM cards.

Step 2



- Pull the tabs and then slide the card to remove the RAM cards. To reinsert a new RAM card, slide the card in and then make sure it clips in with the tabs.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 07:50:33 PM.